







Fig. 20XXET cULus & FM Approved Brackets									
Bracket Fig#&Size	cULus Listed	FM Approved	FlexHead Historical Model Number						
BKT-MPO	✓	✓	MPO24BKT2						
BKT-MPT	✓	✓	MPT24BKT1						
BKT-ADO, 16 in	✓	✓	ADO16BKT3						
BKT-ADO, 24 in	✓	✓	ADO24BKT3						
BKT-ADO, 30 in		✓	ADO30BKT3						
BKT-ADO, 48 in		✓	ADO48BKT3						
BKT-UHO3		✓	UHO-3						
BKT-TZ		✓	SPO6TZBKT2						

Notes: Flexhead Historical Model Numbers may be used to verify cULus Listings & FM Approvals.

Specifications

Assembly Length

24 in 36 in 48 in

60 in 72 in

Outlet Drop Size (NPT per ASME B1.20.1)

½ NPS (DN15) ¾ NPS (DN20)

Inlet Pipe Size (NPT per ASME B1.20.1) 1 NPS (DN25)

Pressure Rating

UL: 175 psi (1,205 kPa) FM: 175 psi (1,205 kPa)

Minimum Bend Radius

UL: 3.0 in (76.2 mm) FM: 8.0 in (203.2 mm)

Ambient Temperature

300°F (145°C) Max

Material

304 Stainless Steel

Features

- 100% Leak Tested Fully Welded Design
- Pre-Installed Sprinkler Head option available upon request
- Compliant with NFPA 13, 13R, & 13D
- For Wet, Dry, and Pre-Action Sprinkler Systems

Ordering

Specify figure number, length, outlet size, and description.



PROJECT INFORMATION	APPROVAL STAMP		
Project:	Approved		
Address:	Approved as noted		
Contractor:	Not approved		
Engineer:	Remarks:		
Submittal Date:			
Notes 1:			
Notes 2:			



	Equivalent Length								Max # of 90° Bends		
Outlet Drop Size	Asembly Length		FM						o bellas		
		UL	k = 5.6	k = 8.0	k = 11.2	k = 14.0	k = 16.8	UL	FM		
-	In	ft/m	ft/m	ft/m	ft/m	ft/m	ft/m				
½ NPS DN15	24	19 5.8	26.4 8.0	6.8 2.1	7.4 2.3	-	-	3	1		
	36	23 7.0	30.1 9.1	11.8 3.6	12.5 3.8	-	_	3	2		
	48	27 8.2	33.8 10.3	16.9 5.2	17.6 5.4	_		4	3		
	60	32 9.8	37.5 11.4	21.9 6.7	22.7 6.9	_	_	4	4		
	72	35 10.7	41.2 12.5	27.0 8.2	27.8 8.5	-	_	4	4		
¾ NPS DN20	24	18 5.5	-	8.8 2.7	8.7 2.7	14.7 4.5	8.2 2.5	3	1		
	36	23 7.0	_	25.2 7.7	14.2 4.3	21.8 6.6	13.0 4.0	3	2		
	48	23 7.0	-	32.9 10.0	18.4 5.6	29.0 8.8	17.8 5.4	4	3		
	60	29 8.8	-	40.6 12.4	22.7 6.9	36.1 11.0	22.6 6.9	4	4		
	72	32 9.8	-	48.5 14.8	27.0 8.2	43.2 13.2	27.5 8.4	4	4		

^{1.} Equivalent Length of NPS 1 (DN25) Sch 40 Pipe.



^{2.} Equivalent Lengths listed above assume the maximum number of 90° bends.

^{3.} A 90° bend can be achieved with two 45° bends or three 30° bends.

^{4.} UL Equivalent Lengths are listed for installation with sprinklers with a maximum k-factor of 16.8.

^{5.} FM Equivalent Lengths listed above include the Friction Loss of the Sprinkler.

^{6.} UL Listed for "Limited Flexibility".



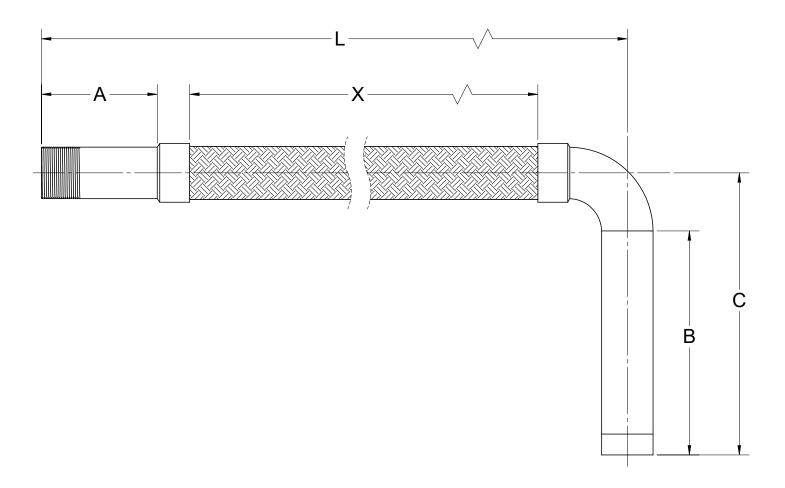


Fig. 20XXET Dimensions & Model Number												
Asembly Length	True Length (L)		Braid Length (X)		Inlet Nipple Length (A)		Outlet Drop Height (B)		Outlet Drop Length (C)		FlexHead Historical Model Number	
in	in	mm	in	mm	in	mm	in	mm	in	mm	½ NPS Outlet	3/4 NPS Outlet
24	24	610	20	508							2024ET-50	2024ET-75
36	36	914	32	813							2036ET-50	2036ET-75
48	48	1219	44	1118	3.0	76.2	5.65	143.5	7.2	183.4	2048ET-50	2048ET-75
60	60	1524	56	1422							2060ET-50	2060ET-75
72	72	1829	68	1727							2072ET-50	2072ET-75





Installation Instructions

Connection to the Branch

- Apply pipe sealant or tape to the NPT thread.
- Install into branch outlet. Tighten the assembly by placing the pipe wrench on the pipe nipple section.
- Note: Only place the pipe wrench on the unthreaded portion of the inlet nipple.

Connection to the Sprinkler Head

 Installation of the sprinkler head into the outlet drop shall be per the sprinkler manufacturer's installation instructions.

Connection to the Bracket

 Installation of the hose to the bracket shall be per the bracket's installation instructions. The bracket shall be listed for installation with the 20XXET. See Page 1 for Listed and Approved brackets.

Bending the Hose

- The hose may be bent to ensure the inlet nipple and outlet drop are in the desired locations.
- The hose should never be bent to a radius less than minimum listed bend radius. The bend radius is defined to the center of the hose.
- 3. The hose must have at least one 90° bend. A 90° bend can be achieved with two 45° bends or three 30° bends.
- 4. For best performance, the bends in the hose should be as large and smooth as possible.

General Installation Notes

- 1. Never apply a wrench to the braided hose.
- The Fig 20XXET may be installed in any direction from the branch.
- If installing a sprinkler to a bracket after installation, it is best practice to prevent twisting of the bracket and hose by holding the outlet drop with a wrench.

