


## Installation Instructions

- 1 Place one side of the locking tab of the Smart-Receivers<sup>™</sup> into the open side of a <sup>1</sup>%<sub>6</sub>" or taller strut channel.
- 2 Push down the opposing side of the Smart-Receivers<sup>™</sup> into the open strut channel.
- 3 Listen for a click to know the Smart-Receivers<sup>™</sup> is locked in place.

Dakota Systems is a Division of Mag Daddy LLC.

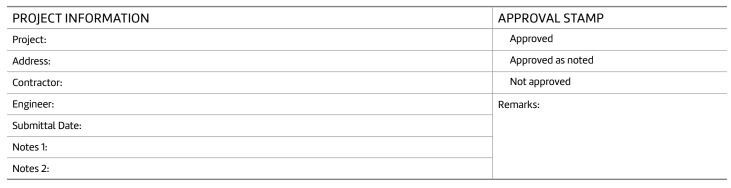



## **Material Specifications**

## Material: Steel

Finish: Pre Galvanized/Zinc Plated

Service: For adding mounting slots for Dakota Smart-Clamps<sup>™</sup> (ASDAKCLAMP) to any 1<sup>5</sup>/<sub>8</sub>" channel.

Approval: Complies with the requirements of ANSI/MSS SP-58.

## Features:

- Snaps into any strut with a 7/8" opening
- Moveable along channel
- Quick back to back strut application

Ordering: Specify figure number, size and description.

**Notes:** Will accommodate clamps from 1/2" to 1" IPS.

Patents: Patent Pending

